


## WWW.INSANEHYDRAULICS.COM


Step3 – screw in the opposite to the pressurized servo-cylider till the swashplate is in neutral position, Lock it – this servocylinder is in the correct position

Step4 - adjust the position of the other servo-cylider either by performing the previous steps or by screwing it in till it touches the pre-tensioned spring

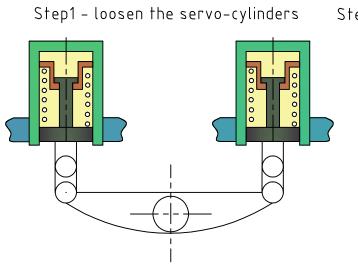

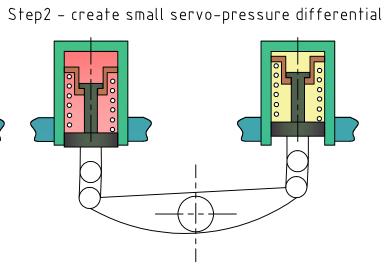

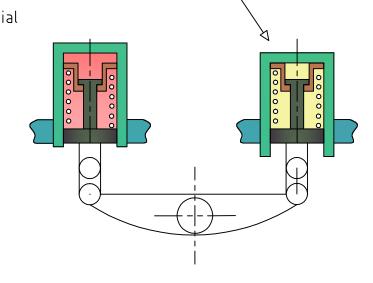

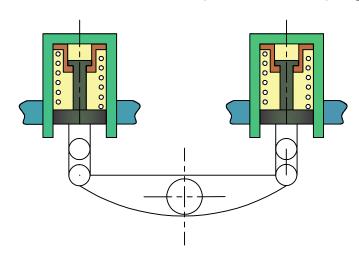

The swashplate is slightly tilted at this point which can be seen by the lines delta P

